



SECUNORM PROFI

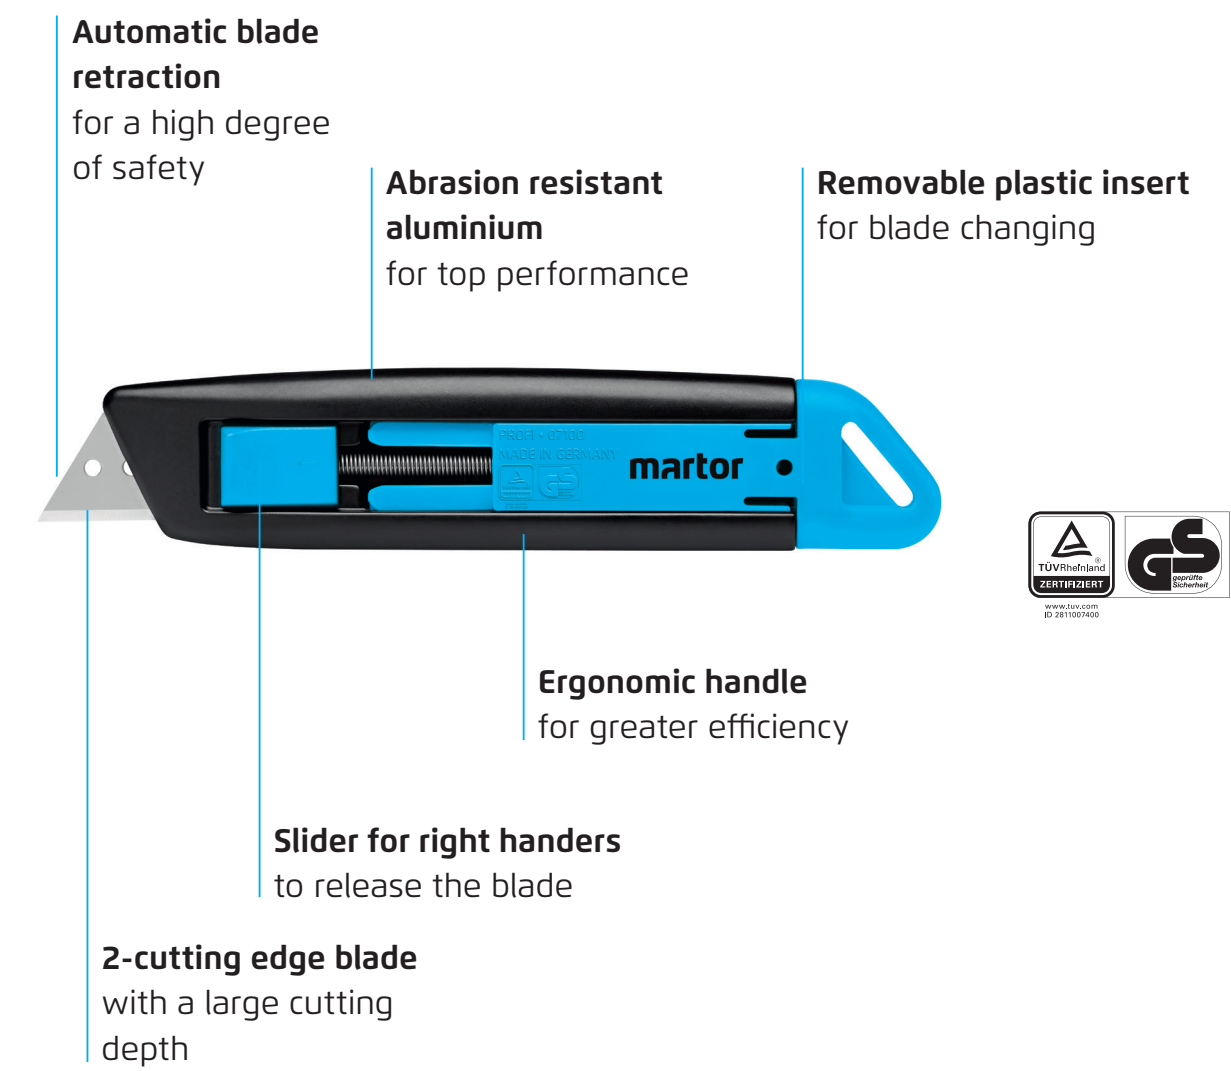


Please note: To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.


USAGE

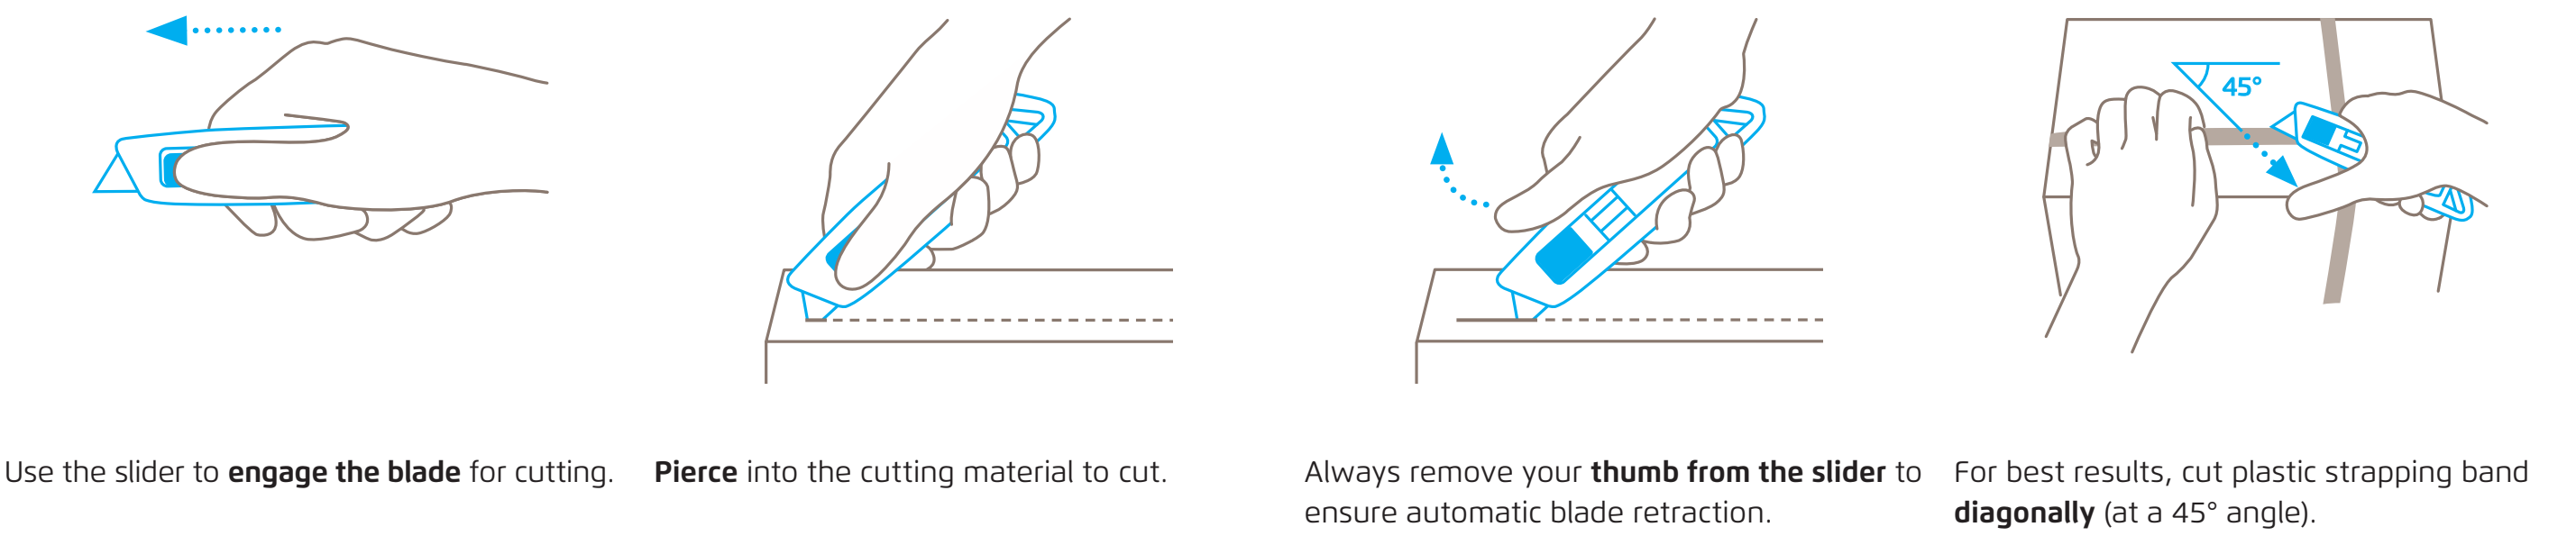

BLADE CHANGE

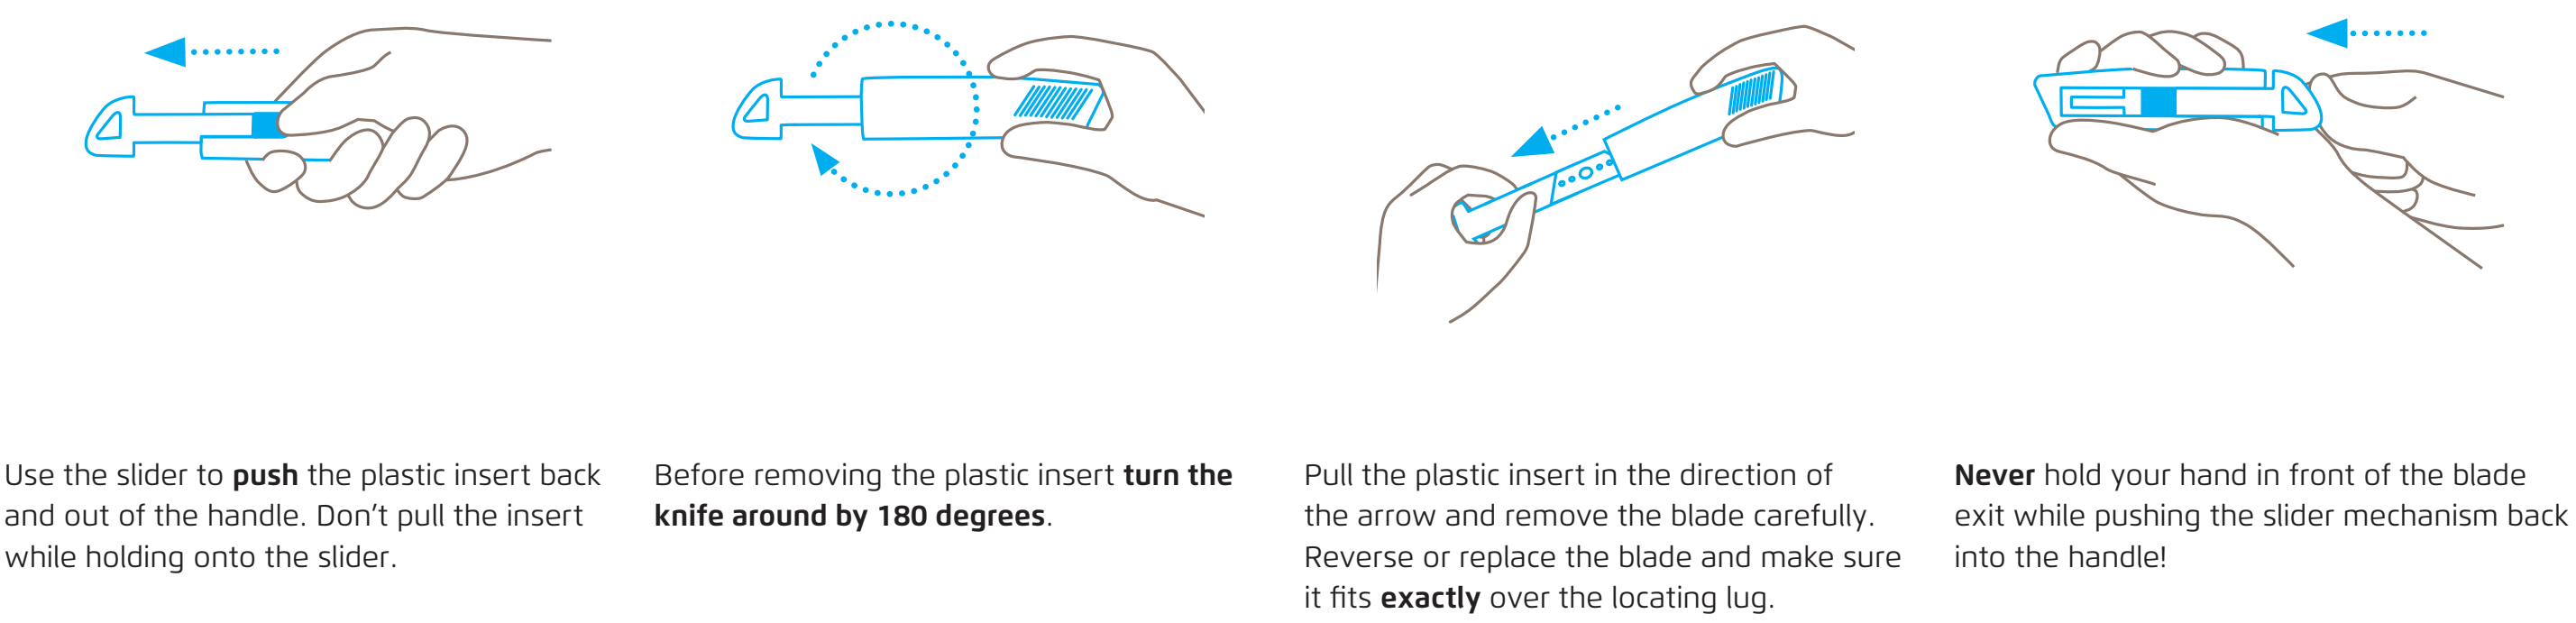


PROTECTION OF USER

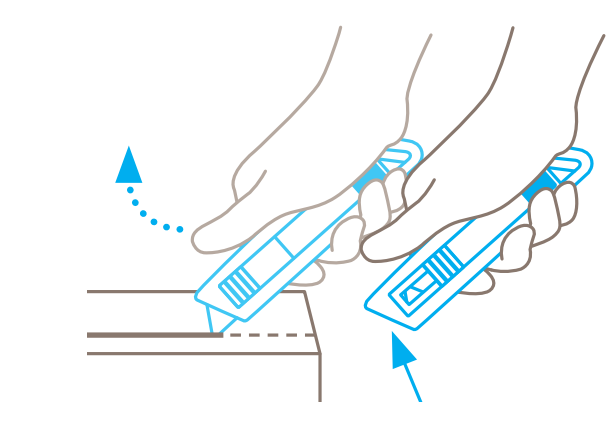

Following cutting, the blade immediately retracts into the handle. Condition: you have **released hold of the slider**.

DISPOSAL

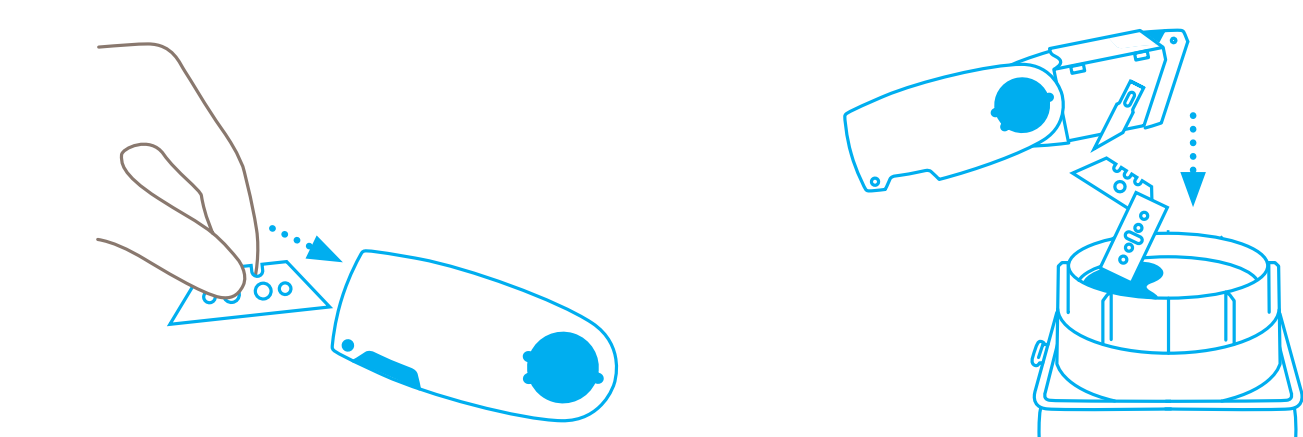

Your SAFEBOX is the best place to store **used blades**.

When the SAFEBOX is full, **empty all contents** into your USED BLADE CONTAINER.