



SECUNORM 300

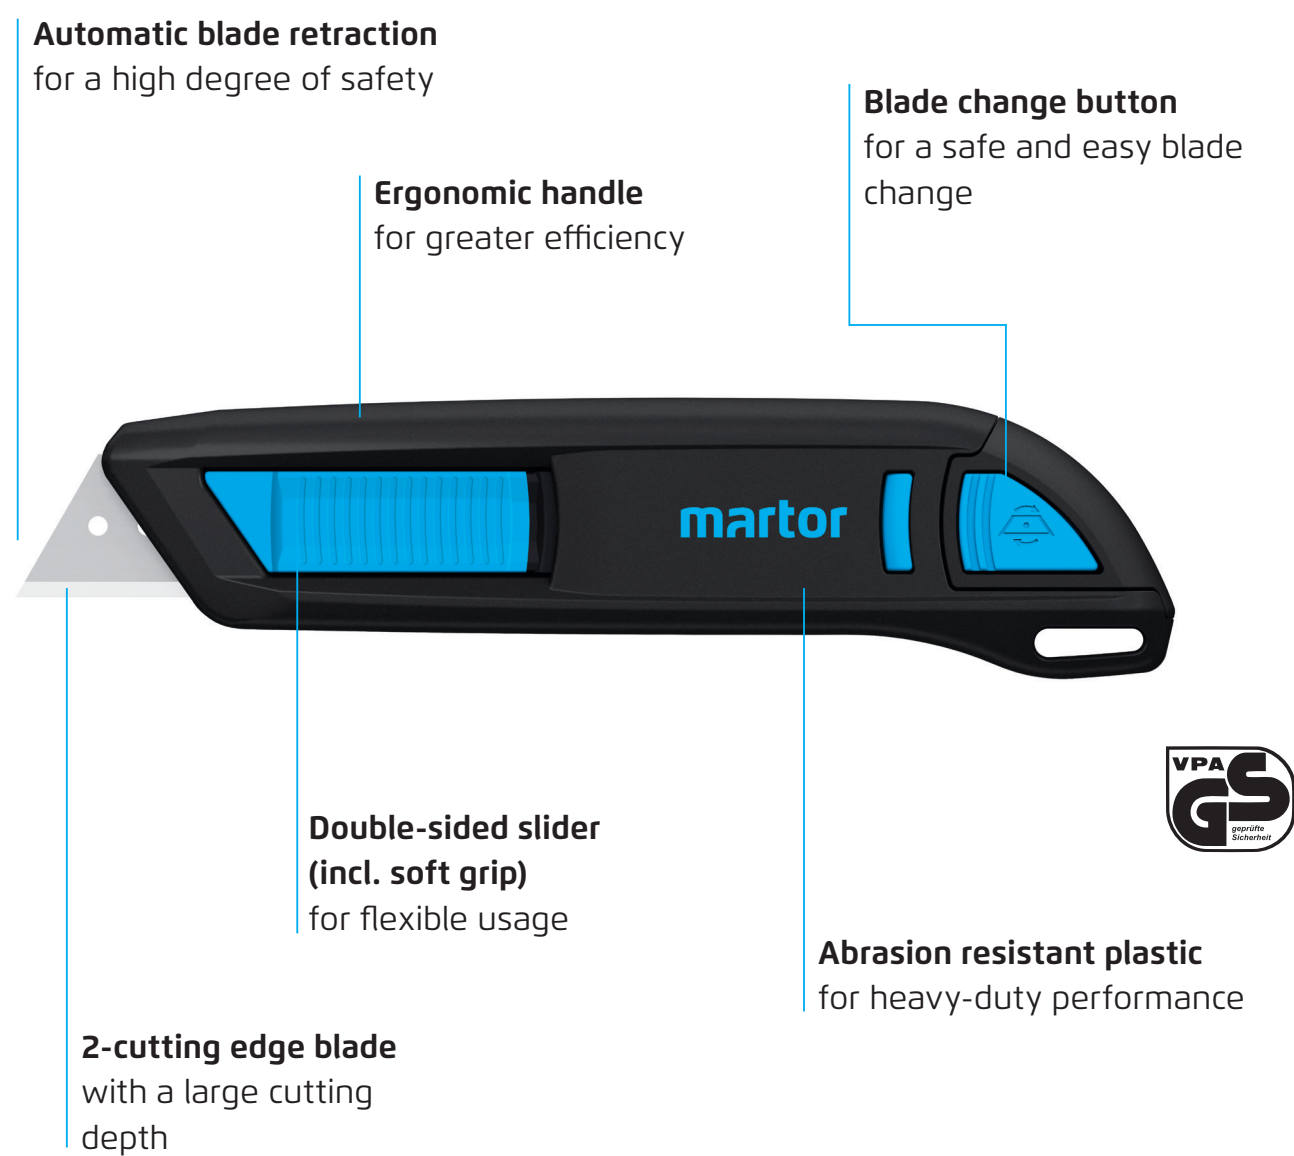


Please note: To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.


USAGE

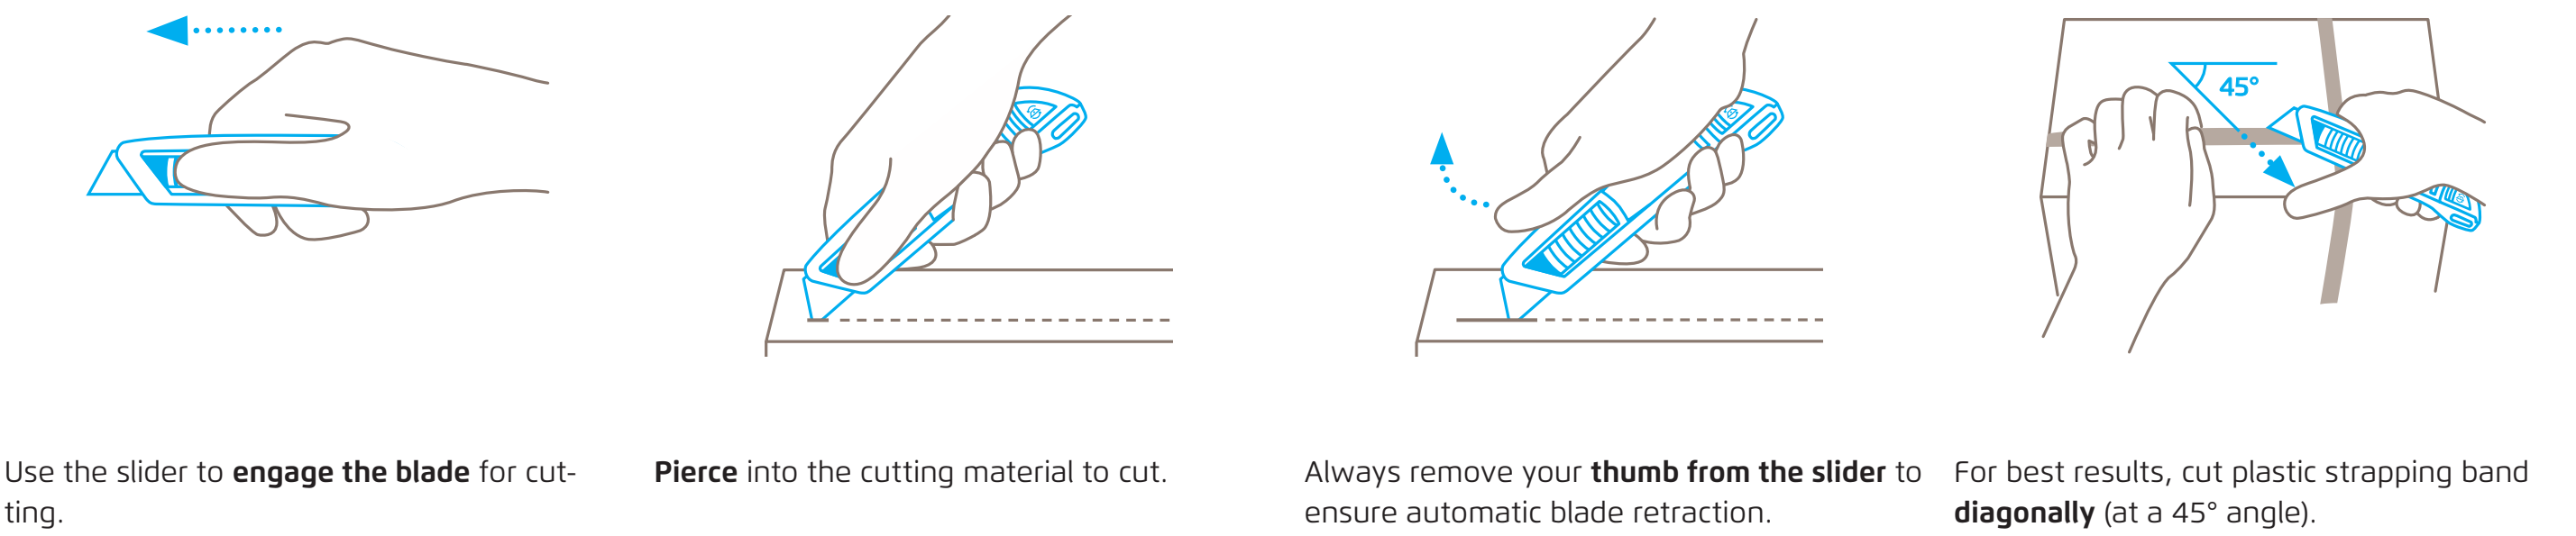

BLADE CHANGE

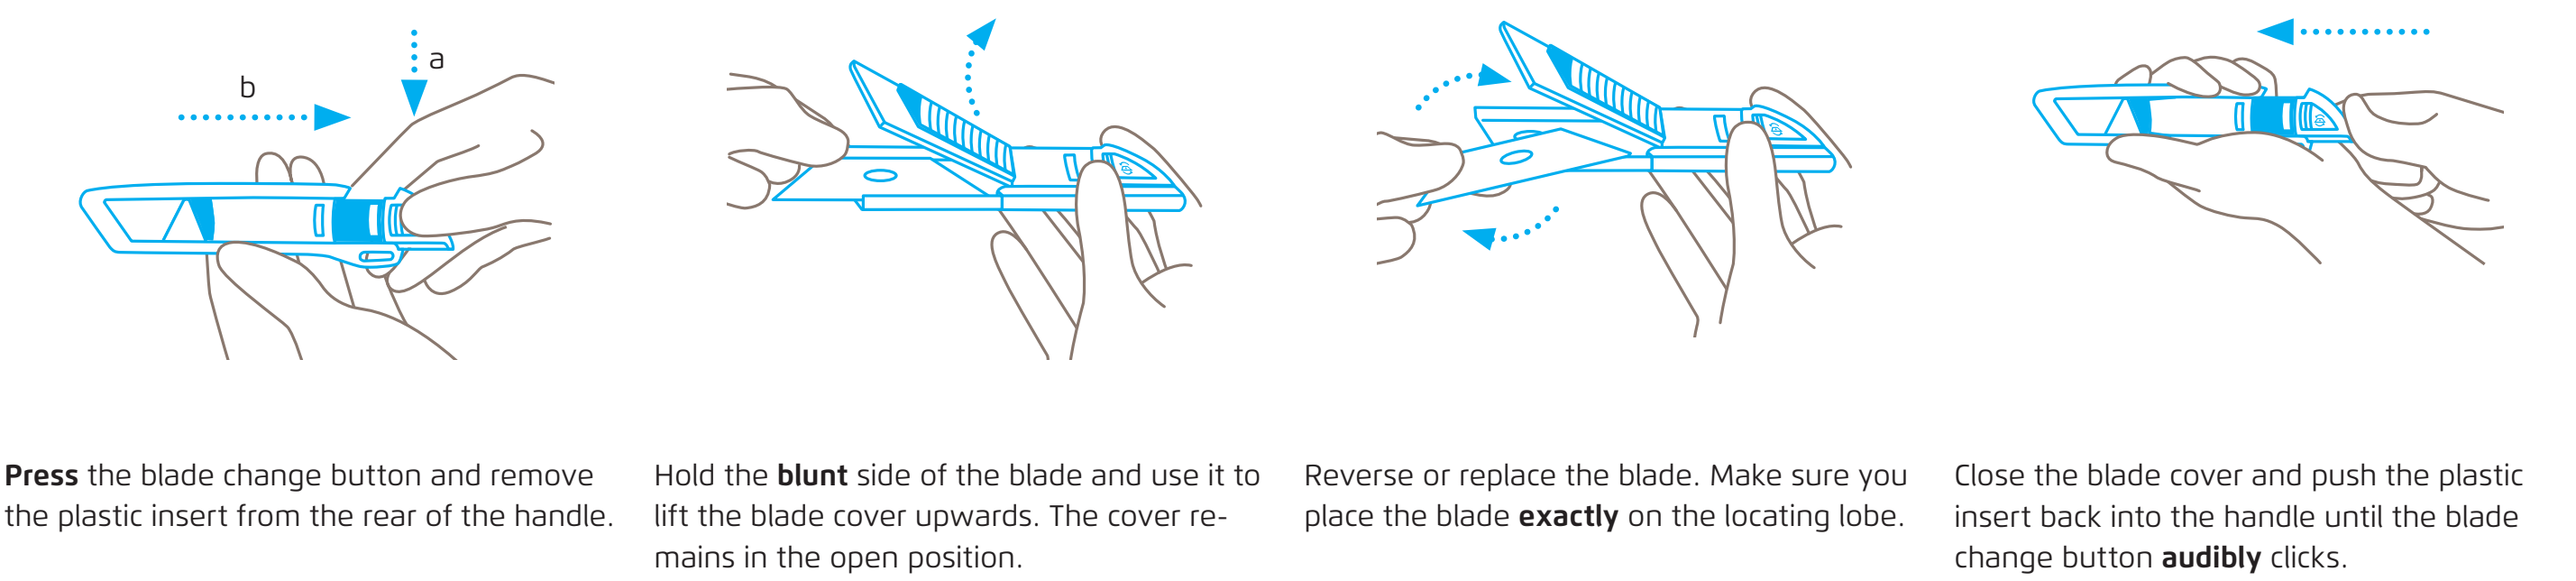


PROTECTION OF USER

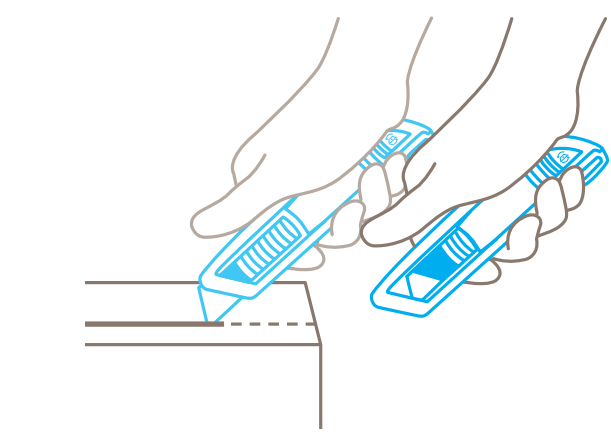

Following cutting, the blade immediately retracts into the handle. Condition: you have **released hold of the slider**.

DISPOSAL

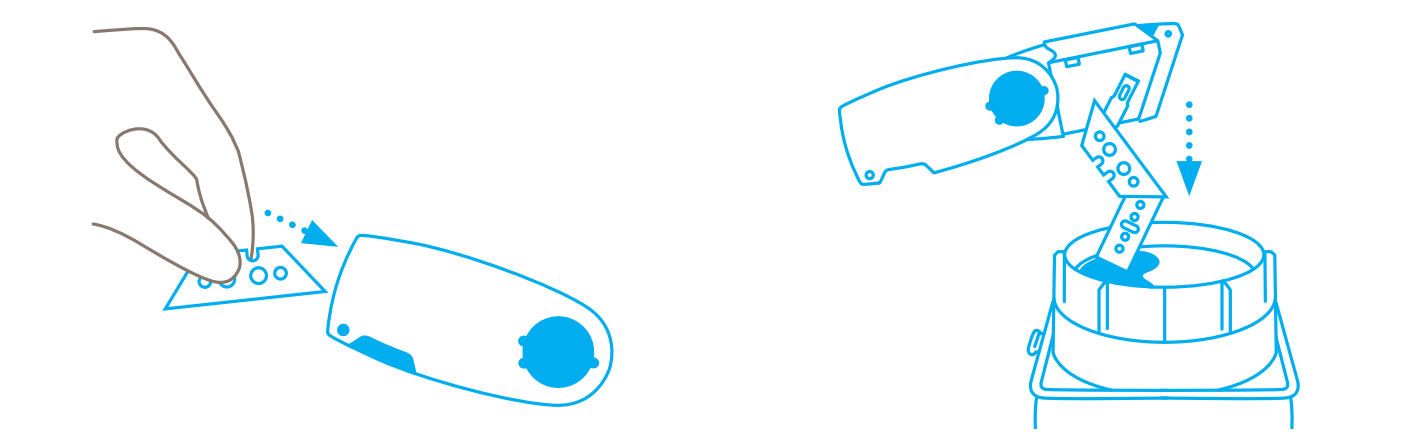

Your **SAFEBOX** is the best place to store **used blades**.

When the **SAFEBOX** is full, **empty all contents** into your **USED BLADE CONTAINER**.