




## SECUNORM PROFI40 MDP

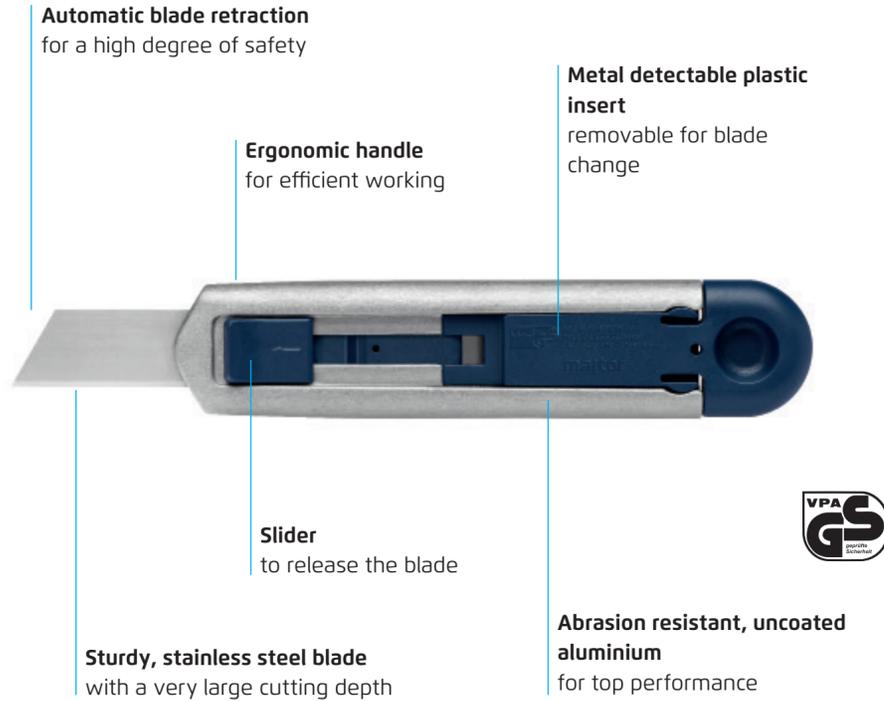


### USAGE

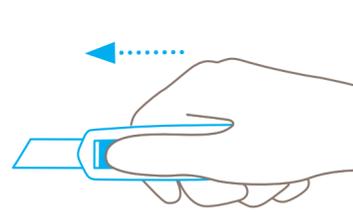


Use the slider to **engage the blade** for cutting.

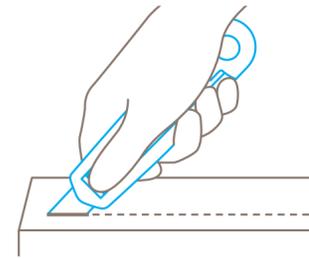

**Pierce** into the cutting material to cut.

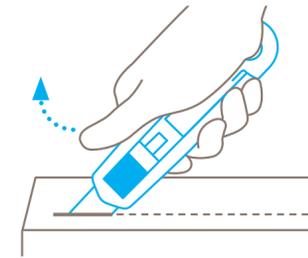


Always remove your **thumb from the slider** to ensure automatic blade retraction.

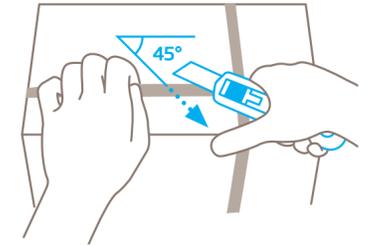


For best results, cut plastic strapping band **diagonally** (at a 45° angle).


### BLADE CHANGE

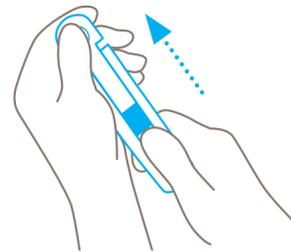


Use the slider to **push** the plastic insert back and out of the handle. **Don't** pull the insert while holding onto the slider.

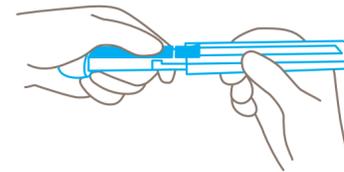

When the slider and blade leave the handle, position your **index finger under the blue blade holder** to hold it tight.

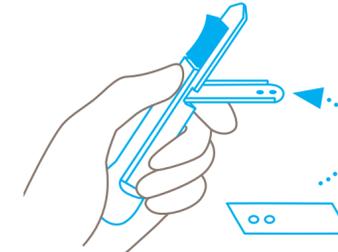


Use your index finger to slowly **fold out the blade holder downwards**. Use the other hand to remove the blade to either replace it or turn it around (for left handers).

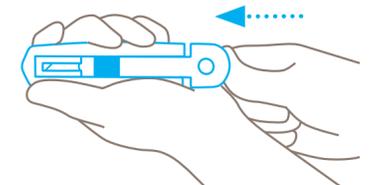


Make sure you position the blade **exactly over the locating lugs**, close the blade holder upwards. **Attention:** Never hold your hand in front of the blade exit!

### PROTECTION OF USER

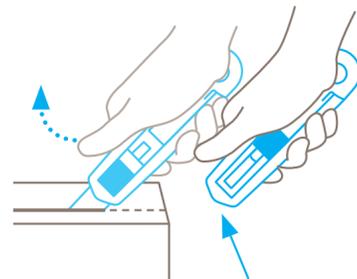


Following cutting, the blade immediately retracts into the handle. Condition: you have **released hold of the slider**.

### DISPOSAL

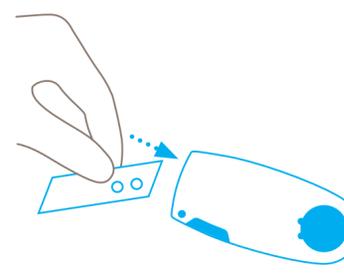

Your **SAFEBOX** is the best place to store **used blades**.

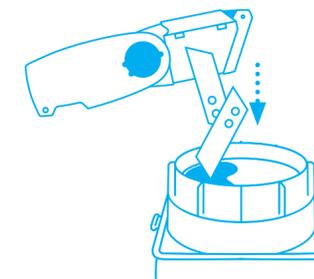

When the **SAFEBOX** is full, **empty all contents** into your **USED BLADE CONTAINER**.

**Please note:** To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.